


Backup Recorded Footage

1. Plug a USB memory stick into the recorder. (Must be FAT32 format)
2. Search for the event to be backed up using the Playback guide (see overleaf). If you wish to backup multiple cameras, ensure that all the required cameras are selected at the top right of the screen.

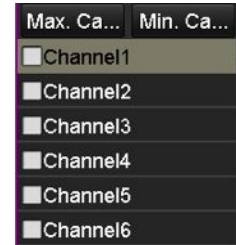


3. At the beginning of the time you wish to backup, click on the scissors button at the bottom left of the screen to begin clipping. When you have come to the end of the period you wish to backup, click on the scissors button again to stop clipping.




4. If you need to back up a photo instead, the camera button next to the scissors will allow you to take a snapshot from the cameras selected.

5. Right-click anywhere on the playback screen and you will be prompted to save the clips you have Collected. Click Yes.

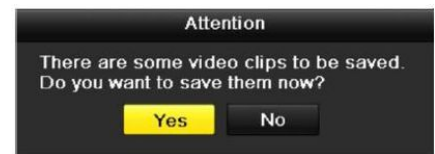

6. The export window will pop up. If your USB memory stick is not recognized, click refresh.

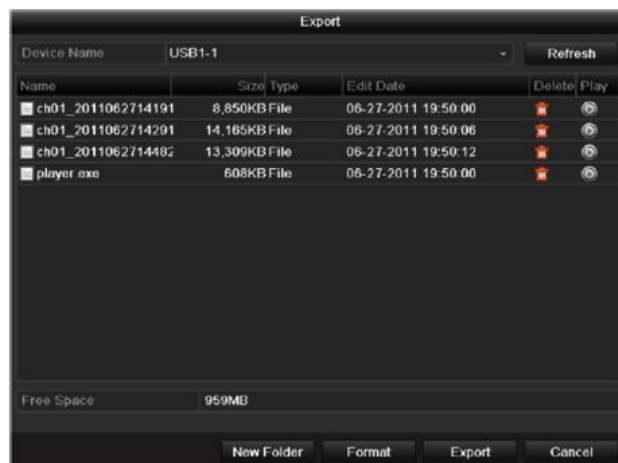

7. Click on Export.



8. When the backup is finished, the Export Finished window will appear. Click OK. The video footage and player software will now be saved to your USB memory stick.